

PURE FLEX TOP USER INSTRUCTIONS


- 1. Ambient operating temperature: -13°F to 113°F.
- 2. Make sure that even during installation, the predetermined bending direction is NEVER changed. The product is TOP bending only, and can not be twisted or bent LEFT or RIGHT
- 3. PURE FLEX TOP shall not be bent sharply.
- 4. The maximum bending radius is 6", over-bending will damage the product and void any warranty.
- 5. During the installation, the PURE FLEX TOP can not be:
- -Twisted
- -Dropped
- -Sagging/Hanging down
- -Bent at a radius of less than 6"
- 6. 3 installation methods:.
- -Mounting clips
- -Aluminum channel
- -Curved profile
- 7. *PureFlex is cuttable every 4".

New driver may be necessary if shortening the length. * Consult factory for compatible driver per each length of run.


STANDARD DIMENSION

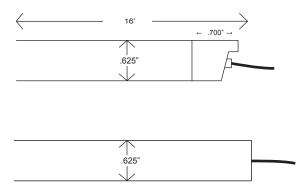


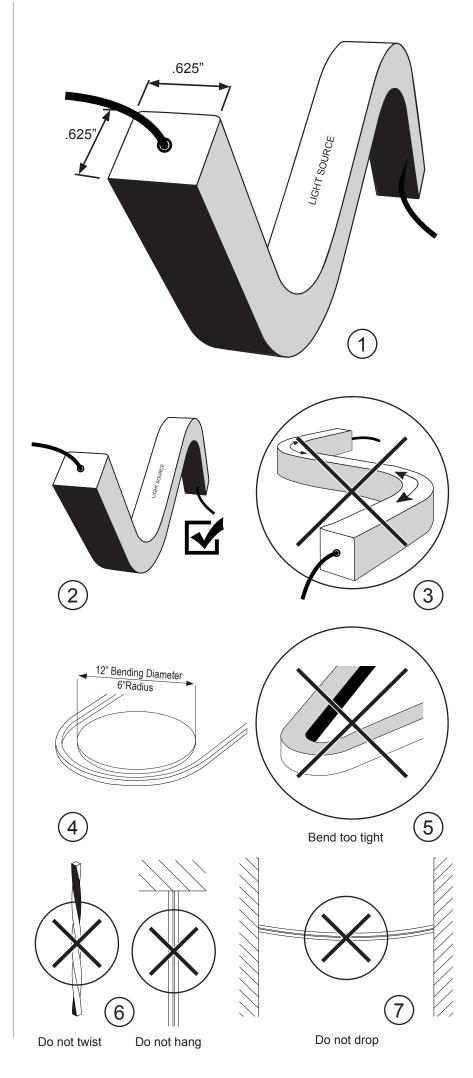


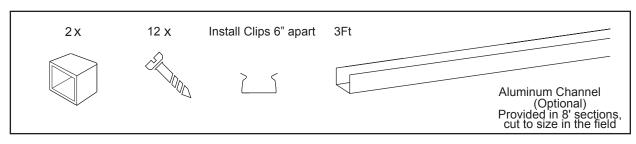





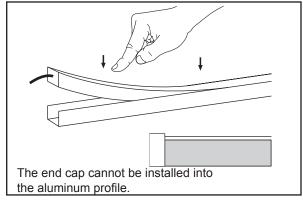

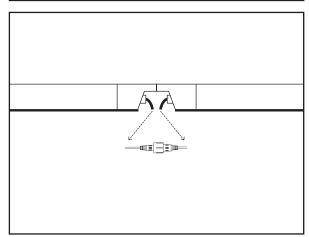

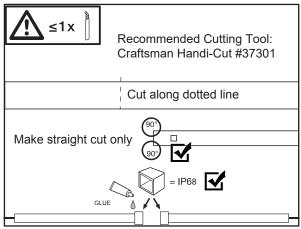

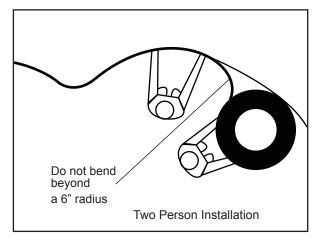

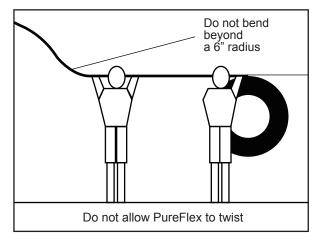


PURE FLEX SIDE USER INSTRUCTIONS


- 1. Ambient operating temperature: -13°F to 113°F.
- 2. Make sure that even during installation, the predetermined bending direction is NEVER changed. The product is SIDE bending only, and can not be twisted or bent LEFT or RIGHT
- 3. PURE FLEX SIDE shall not be bent sharply.
- 4. The maximum bending radius is 6", over-bending will damage the product and void any warranty.
- 5. During the installation, the PURE FLEX SIDE can not be:
- -Twisted
- -Dropped
- -Sagging/Hanging down
- -Bent at a radius of less than 6"
- 6. 3 installation methods:.
- -Mounting clips
- -Aluminum channel
- -Curved profile
- 7. *PureFlex is cuttable every 4".


New driver may be necessary if shortening the length.


* Consult factory for compatible driver per each length of run.


STANDARD DIMENSIONS

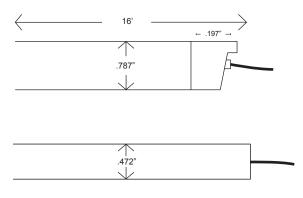


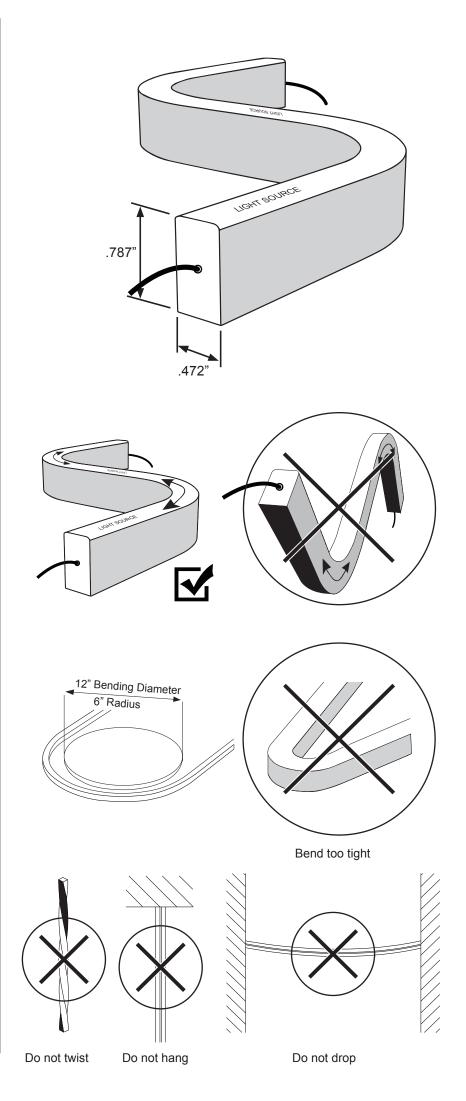


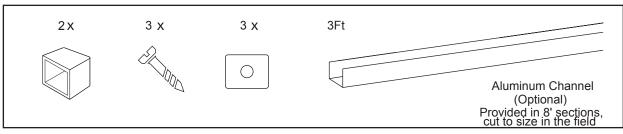


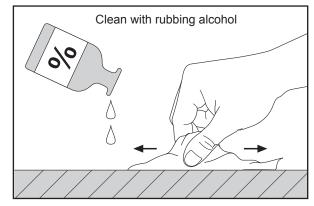


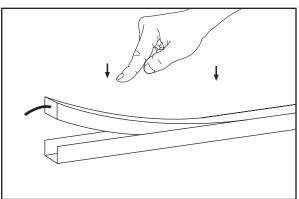

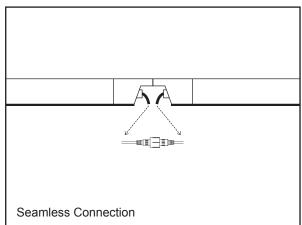

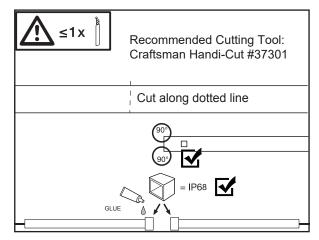

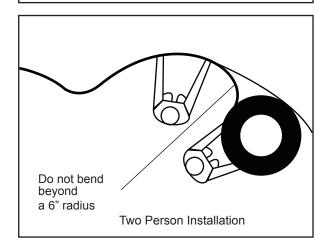

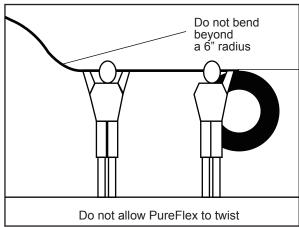

PURE FLEX MINI USER INSTRUCTIONS

- 1. Ambient operating temperature: -13°F to 113°F.
- 2. Make sure that even during installation, the predetermined bending direction is NEVER changed. The product is TOP bending only, and can not be twisted or bent LEFT or RIGHT
- 3. PURE FLEX MINI shall not be bent sharply.
- 4. The maximum bending radius is 6", over-bending will damage the product and void any warranty.
- 5. During the installation, the PURE FLEX MINI can not be:
- -Twisted
- -Dropped
- -Bent at a radius of less than 6"
- -Sagging/Hanging down
- 6. 3 installation methods:.
- -Mounting clips
- -Aluminum channel
- -PC profile
- 7. PureFlex Mini is cuttable every 4".

New driver may be necessary if shortening the length.

* Consult factory for compatible driver per each length of run

STANDARD DIMENSION

